


INTELLIGENT GROWING SYSTEMS™

iGS-100

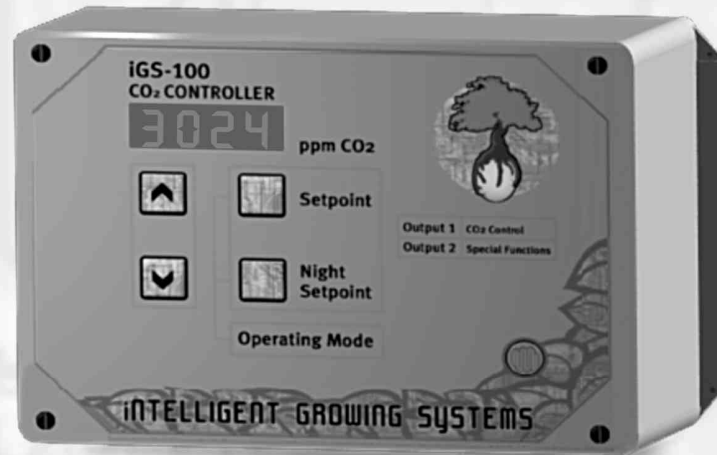


PLUG 'n' GROW

USER  
MANUAL

[www.igrowing.ca](http://www.igrowing.ca)

Manufactured in Canada by : Nova Biomatique Inc. T: [418] 856-6274 F: [418] 856-6239

# TABLE OF CONTENTS

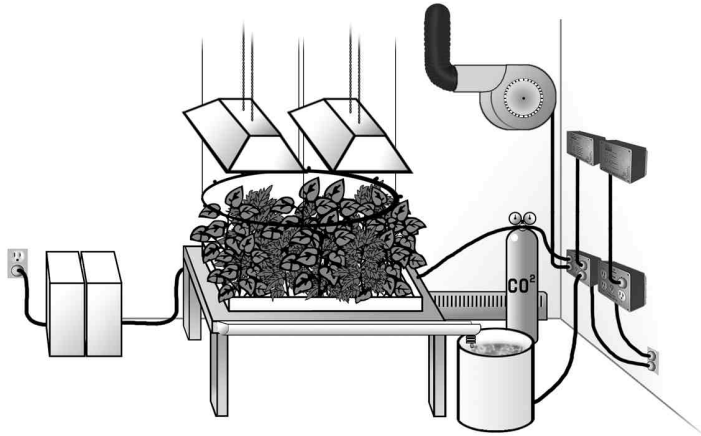

Welcome to the world of smart CO<sub>2</sub> control. We are pleased you have chosen the intelligent Growing Systems iGS-100 product to benefit from the added yield and quality CO<sub>2</sub> controlled environments can give you ! Apart from its reliability and precision, you will benefit from incorporated smart features that will work with you to optimize your CO<sub>2</sub> and climate control.

The first part of this manual aims at giving you a quick start and a global overview of all basic functions and configuration options. The second part will give you a more detailed explanation on the control loops, configuration options and smart features that the iGS-100 works with.

We are always interested in any comments or suggestions you might have. Feel free to let us know at the following e-mail : [info@igrowing.ca](mailto:info@igrowing.ca)

## Part-1 Setting up the controller

Contents and description of the iGS-100 CO <sub>2</sub> controller	3
Tips on proper installation	4
Controller Outputs	5
Output 1 : CO <sub>2</sub> control	5
Output 2 : Auxiliary control	5
Setting operating modes for output 1 and 2	5
Adjusting Day and Night Setpoint values	6
Display functions	7
Displaying the Dynamic Differential	7

## Part-2 More on the iGS-100 CO<sub>2</sub> controller

CO <sub>2</sub> control sequence	8
Dynamic Differential	8
Controller Hints	9
Error Messages	9
CO <sub>2</sub> Sensor calibration	10
Maintenance and warnings	10
iGS-100 Specifications	10
iGS-50 Specifications	11
Product warranty	11
Product repairs	11
iGS-100 Operating Modes	12


<b>CAUTION</b>	EVERY EQUIPMENT PLUGGED INTO THE IGS-25 AND CONTROLLED BY IGS-100 MUST HAVE ITS OWN PROTECTION AGAINST OVERHEATING
----------------	--

# PART-1 SETTING UP THE CONTROLLER


## Contents and description of the iGS-100 CO2 controller

The iGS-100 CO2 smart controller is composed of the following items :

### The iGS-100 control

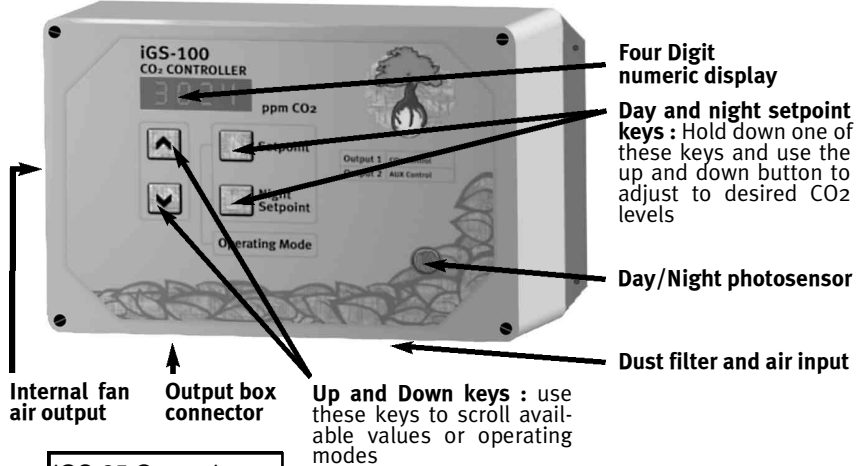

### iGS-25 Output box

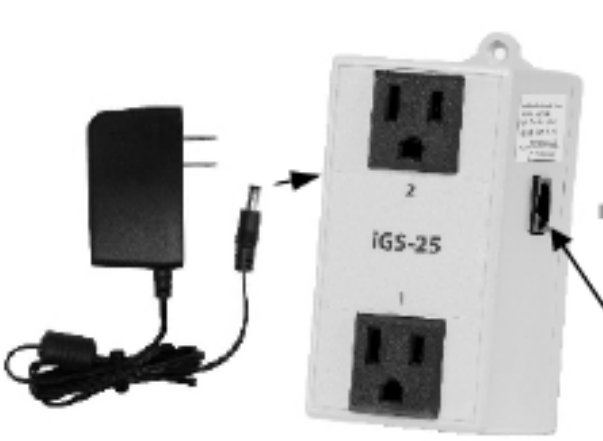

**Output #1 : CO2 control.** will turn on automatically according to operating mode 1-xx.

**Output #2 : Auxiliary control.** will turn on automatically according to operating mode 2-xx.

6 feet cable to connect with the iGS-100 CO2 Controller


The product is completed by this user's manual and a complimentary intelligent Growing Systems user sticker.

## Tips on proper installation

The iGS-100 CO2 control box should be placed as close as possible to the plant canopy where light can be sensed by the photosensor and CO2 sampled taking care not to expose the controller too close to the CO2 source, air evacuation points or heating/cooling equipment. The control box is equipped with an internal fan that speeds up sampling the air. Do not to expose these vent holes to potential sources of moisture or dirt. A lint filter is held by Velcro pieces under the controller. The filter should never be removed indefinitely.

Take care in not exposing the sensor to insufficient light during the day and light during the desired night cycle.

When fixing the control box take care in not over-tightening the screws in the flap holes. The enclosure is made out of solid ABS plastic but a strong compression impact with a big screw can crack the enclosure. Make sure that the wall upon which the control and output boxes will be fixed is flat. Take care in not bending the enclosures.

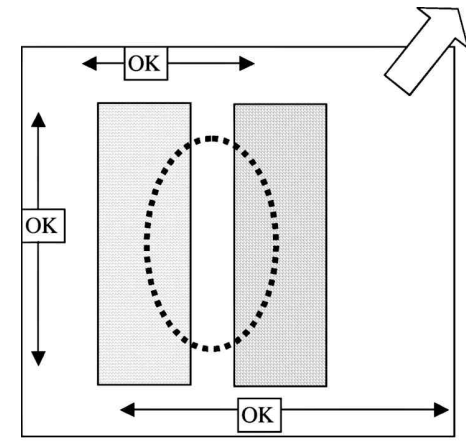

Usually the CO2 source is located in the middle or over the garden whereas the controller will be fixed right outside of your garden limits.

The iGS-25 power Box can be fixed anywhere around the control box without kinking or binding the 6 feet connection cable.

Once both enclosures are properly installed, plug the 120 Volts power cords into a 15 A 120 Volts electrical outlet. Then connect the cable supplied with the controller into the RJ-45 jack situated under each enclosure. The controller will turn-on and warm-up.

Disconnecting the cable from either side will interrupt the controller's operation. Once reconnected the controller will reboot and warm-up the CO2 sensor (32 seconds). All operating modes and values entered before the interruption will be retrieved automatically from memory.

**CAUTION** EVERY EQUIPMENT PLUGGED INTO THE IGS-25 AND CONTROLLED BY IGS-100 MUST HAVE ITS OWN PROTECTION AGAINST OVERHEATING

## Controller outputs

Once the controller is properly installed it is important to configure the controller's two (2) independent outputs according to the grower's objectives. Through the following operating modes output 1 (CO<sub>2</sub> control) can perform CO<sub>2</sub> enrichment and venting only during the day, the night or day and night. Output 2 (Auxiliary control) benefits from the same choice as for output 1 and offers timer associated functions.

### Output 1 : CO<sub>2</sub> output control configuration

The output labeled as number "1" performs the functions associated with the CO<sub>2</sub> control. Usually if output 1 is configured to reduce CO<sub>2</sub> in the air you will plug an extraction fan into it. On the other hand if output 1 is configured to add CO<sub>2</sub> in the air you will plug a CO<sub>2</sub> generator of some sort in output 1.

The CO <sub>2</sub> control loop will:	Code
Add (enrich) CO <sub>2</sub> during the day only	1-01*
Add (enrich) CO <sub>2</sub> during the night only	1-02
Add (enrich) CO <sub>2</sub> day and night	1-03
Reduce (vent) CO <sub>2</sub> during the day only	1-04
Reduce (vent) CO <sub>2</sub> during the night only	1-05
Reduce (vent) CO <sub>2</sub> Day and night	1-06

\* Factory default

Operating mode 1-\_\_\_\_

### Output 2 : Auxiliary output control configuration

The output labeled as number "2" performs control over the auxiliary equipment that can be used when controlling CO<sub>2</sub> levels.

The auxiliary output can be configured to be ON or OFF during the day, the night or day and night (row choices in the table). In any of the latter choices, the auxiliary output will toggle state when the CO<sub>2</sub> output turns ON. The auxiliary output returns to normal when the CO<sub>2</sub> output turns OFF except if you choose an additional delay (5, 10, 15 or 20 minutes, column choices in table) at the end of which the auxiliary output will return to normal (except if another injection cycle is in progress).

If you wish for the auxiliary output to be ON except when the CO<sub>2</sub> output is ON, the following table will give you your operating mode.

Auxiliary output is ON during the :	Additional delay to keep auxiliary output OFF during CO <sub>2</sub> sequence				
	0 min.	5 min.	10 min.	15 min.	20 min.
Day	2-01*	2-02	2-03	2-04	2-05
Night	2-11	2-12	2-13	2-14	2-15
Day and night	2-21	2-22	2-23	2-24	2-25

\* Factory default

If you wish for the auxiliary output to be OFF except when the CO<sub>2</sub> output is ON, the following table will give you your operating mode.


Auxiliary output is OFF during the :	Additional delay to keep auxiliary output ON during CO <sub>2</sub> sequence				
	0 min.	5 min.	10 min.	15 min.	20 min.
Day	2-31	2-32	2-33	2-34	2-35
Night	2-41	2-42	2-43	2-44	2-45
Day and night	2-51	2-52	2-53	2-54	2-55

Note : If the auxiliary output is configured to be OFF during the day except when CO<sub>2</sub> output is ON, the auxiliary output will always be ON during the night. Auxiliary output OFF during the night except when CO<sub>2</sub> output is ON will also force the auxiliary output to be ON during the daytime.

Operating mode 2-\_\_\_\_

### Setting operating modes for output 1 and 2

Once you have chosen the operating mode associated with the role you want each output to perform you have to enter it into the controller.

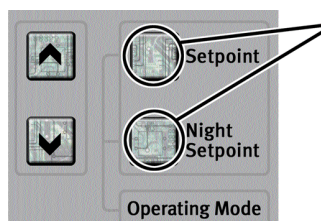

1- Press and hold the SETPOINT and NIGHT SETPOINT button simultaneously. The display will show the operating mode value 1-xx, 2-xx or 3-xx.


2- Let go of both keys and repress them simultaneously to toggle between operating mode value (1-xx, 2-xx or 3-xx) .

3- To change the value of the displayed operating mode simply use the UP and DOWN buttons until the desired code is displayed while maintaining pressure on the both SETPOINT keys.

Once the SETPOINT and NIGHT SETPOINT buttons are released the display returns to showing the actual CO<sub>2</sub> reading and the controller will perform the configured behavior within 4 seconds.

### Adjusting day and night setpoint values

Now you can set your target CO<sub>2</sub> levels for the daytime and nighttime.

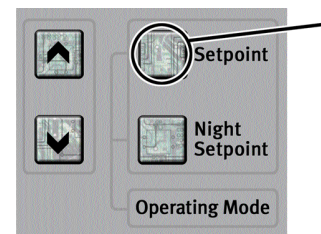


1- Press and hold the SETPOINT button and the display will show you the actual day setpoint value.

2- To change that value simply use the UP and DOWN buttons while maintaining hold on SETPOINT button. Holding the UP or DOWN button for more than 4 seconds will increase the speed at which the value will be modified.

3- Release the SETPOINT button to return to showing the actual CO<sub>2</sub> concentration. The controller will respond to the new value instantly and according to its output configuration.

Setpoints adjustments for CO<sub>2</sub> control are adjusted through 50 ppm increments. Going over 4900 ppm will rollover the display to 0 ppm.

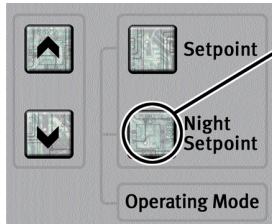

1- Holding down the NIGHT SETPOINT and using the UP and DOWN keys will adjust the night setpoint.

When you chose the controller to control CO<sub>2</sub> levels day and night the controller will use the setpoint value during the day and the NIGHT SETPOINT value during the night even when in day and night modes.

## Display functions


The controller will flash the CO<sub>2</sub> levels displayed when CO<sub>2</sub> venting or enrichment is taking place.

When the dot situated at the bottom right of the rightmost digit is visible, another value than the actual CO<sub>2</sub> reading is being displayed.

When the Hint function is activated (see page 9) the same dot (rightmost digit) will flash when hint codes are available.

## Displaying the Dynamic Differential

The Dynamic Differential is the window of operation that the controller will have chosen to optimize setpoint fidelity without provoking annoying repetitive switching or setpoint over and undershoots. The value takes approximately a full day of normal operation of your grow room to stabilize. The smaller your Dynamic Differential is, the better the overall grow room equipment is tuned. The Dynamic Differential will vary automatically to changes in room sizes, CO<sub>2</sub> enrichment flow rate, ventilation apparatus, control sequence and rate of consumption of CO<sub>2</sub> by the garden.

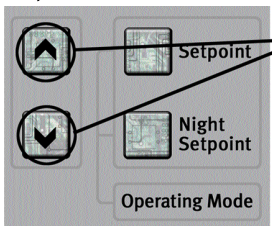

1- In order to display the current Dynamic Differential value, press the UP and DOWN button simultaneously.

2- Let go of both keys to switch back to normal display

## PART-2 MORE ON THE iGS-100

### CO<sub>2</sub> Control sequence

When the controller is configured to add CO<sub>2</sub> in your grow room, it will activate both slots of output 1 (CO<sub>2</sub> control) when the sensor detects levels under the user defined levels minus the Dynamic Differential. The Dynamic Differential is subtracted to the setpoint to determine at what level the enrichment process has to stop to attain the actual valid setpoint without over or undershooting (CO<sub>2</sub> gas moves slowly in your grow room).

When on the other hand the controller is configured to vent CO<sub>2</sub> out of your grow room, it will activate both slots of output 1 (CO<sub>2</sub> control) when the sensor detects levels over the user defined setpoint plus the Dynamic Differential. The Dynamic Differential is added to the actual valid setpoint to determine when to stop the venting process without under or overshooting.

### Dynamic Differential

The iGS-100 CO<sub>2</sub> controller performs its duties according to a special dynamic differential adjustment algorithm. The controller will automatically adjust the operational differential when the CO<sub>2</sub> levels overshoot or undershoot the desired setpoint level (or night setpoint during the night). This dynamic algorithm adjusts the working parameters of the controller to the reality found in your grow room (CO<sub>2</sub> flowrate, location of venting and CO<sub>2</sub> producing equipment, room volume, ...). It can vary between 50 and 1000 ppm (actually the maximum Dynamic Differential will be the biggest value between 20% of the setpoint or 500) . The controller will always aim at not climbing higher than the used setpoint added with a 50 ppm. In the case of venting, the 50 ppm will be subtracted to the setpoint.

If the controller is set to enrich to a level of 2000 ppm, the Dynamic Differential will modify itself until the control sequence never overshoots 2050 ppm when enriching and 1950 ppm when venting.

<b>CAUTION</b>	<b>EVERY EQUIPMENT PLUGGED INTO THE IGS-25 AND CONTROLLED BY IGS-100 MUST HAVE ITS OWN PROTECTION AGAINST OVERHEATING</b>
----------------	---

## Controller hints

The controller can display hints that can help the grower in assessing the efficiency of his CO<sub>2</sub> enrichment set-up.

To activate the Hints display simply press on the SETPOINT and the NIGHT SETPOINT keys simultaneously until the code 3-00 on the display. Without releasing both setpoints keys press one time on the UP or the DOWN arrow to change the display to 3-01. The Hint algorithm will start analysing your performance.

To check for Hint Codes (which will only be available after 4 full injection or venting cycles, watch for the blinking rightmost dot on the display) use the UP and DOWN keys to scroll through available codes. Write them down and check in the next table. More information to properly analyze performance is available on the following web site [www.igrowing.ca](http://www.igrowing.ca) (October 2002) .

HintCode	Description of hint code
H-01	CO <sub>2</sub> output is ON from 0 to 19% of the time
H-02	CO <sub>2</sub> output is ON from 20 to 39% of the time
H-03	CO <sub>2</sub> output is ON from 40 to 59% of the time
H-04	CO <sub>2</sub> output is ON from 60 to 79% of the time
H-05	CO <sub>2</sub> output is ON from 80 to 100% of the time
H-06	Current ON-time for CO <sub>2</sub> output is four times the average time ON
H-11	Total differential is between 100 and 199 ppm
H-12	Total differential is between 200 and 299 ppm
H-13	Total differential is between 300 and 399 ppm
H-14	Total differential is between 400 and 499 ppm
H-15	Total differential is between 500 and 599 ppm
H-16	Total differential is 600 ppm and up

## Error Messages

As the controller perform its operating functions it will continuously check itself for system faults. When a fault is detected the controller will flash an error code at least once every 32 seconds. The following table describes the error codes :

Error #	Name	Conditions to SET	Conditions to RESET
1	CO <sub>2</sub> Sensor Overflow	CO <sub>2</sub> level above 5000 ppm	CO <sub>2</sub> level below 5000 ppm
2	CO <sub>2</sub> Sensor requires new user calibration	1 year elapsed since last calibration	User calibration must be done
3	CO <sub>2</sub> Sensor malfunction	CO <sub>2</sub> sensor is out of order	CO <sub>2</sub> sensor resumed operation

## CO<sub>2</sub> sensor calibration

Yearly, the controller will develop error code #2 (CO<sub>2</sub> sensor requires calibration). This message aims at giving the grower a time reference for the recalibration of the sensor. At any time the grower can decide to recalibrate his sensor. Whenever the grower has access to a portable calibrated CO<sub>2</sub> sensor (CO<sub>2</sub>-Ref), he or she should use it to perform a calibration on the iGS-100.

The internal CO<sub>2</sub> sensor can be recalibrated the following way:

- 1- Depress the UP key followed by DOWN key, 5 times within a 5 sec. period.
- 2- Display shows [CRL] and [CO2] alternatively : press SETPOINT to continue or press NIGHT SETPOINT to abort calibration.
- 3- Display shows current CO<sub>2</sub> level and [CRL] : press UP or DOWN to correct this value with the real value (CO<sub>2</sub>-Ref), then press SETPOINT to continue or press NIGHT SETPOINT to abort calibration.
- 4- If SETPOINT was depressed, display shows [CRL RUN] to indicate calibration is underway. It may take up to 8 minutes before the sensor resumes operation.
- 5- When calibration is complete, display shows [CRL DONE]. Press any key to exit and resume normal operation. The timer associated to ERROR 2 is reset to 1 year and ERR2 display is cleared.

## Maintenance and warnings

The controller needs a change or clean of the lint air filter situated at the bottom of the controller enclosure. Keeping the filter free of debris will improve the controller's work and prolong the products lifetime.

Keep the photo-sensor clear of debris or dirt.

Take care in not directing a water jet towards the control box (iGS-100) and the output box (iGS-50). These enclosures can withstand light splashing but should not be drenched with water to protect the internal sensor and circuitry and prevent possible electrical hazards.

The maximum current allowed for all the devices connected to all 120 V outlets should never exceed a total of 12A.

## iGS-100 Specifications

Input	:	15 VDC 400mA
Internal Fan	:	3-5 cfm (with lint filter)
CO <sub>2</sub> sensor range	:	0-5000 ppm
CO <sub>2</sub> sensor precision	:	±75 ppm
CO <sub>2</sub> sensor calibration	:	factory calibrated, 1 year
Front Panel	:	Splashproof keyboard membrane
Operating temperature	:	0-60° C, 0-95% (non-condensing)

## iGS-25 Specifications

Input	:	125 Vac 15A max. 60Hz (1 Ph)
Output 1 max load	:	12 A
Output 2 max load	:	12 A
Output 1 and 2 max load	:	12 A
Operating temperature	:	0-60° C, 0-95% (non-condensing)

## Product warranty

Nova Biomatique inc. warrants their “*intelligent Growing System*” controllers and accessories to be free of defects in material and workmanship for a period of **3 years** from the date of original purchase (proof of purchase needed). The warranty applies only to the original purchaser of the product. The warranty is limited to the repair or replacement, at Nova Biomatique’s discretion, of any defective part of the controller or accessories which are covered by the warranty. The warranty does not cover the following : defects resulting from installation, shipping (insurance is recommended), misuse, negligence or tampering, or improper use.

## Product repairs

Nova Biomatique inc. will repair the “*intelligent Growing Systems*” controllers within 10 days of reception at our offices. For repairs not covered by the warranty, the customer will be contacted and informed on the cost and delays and will be asked for a verbal approval. Only when the customer agrees to the repairs in question will the controller be repaired. Shipping fees are the customer responsibility except in the case of a repair covered by the warranty where Nova Biomatique inc. will assume the return shipping fees only.

To send for repairs or upgrades, you must call for a product return number. This call will insure that we have all the information necessary to properly diagnose your controller and to send it back to you.

Toll free line: 1-888-577-6274

Nova Biomatique

85 Route 132 West

La Pocati re,

Quebec, Canada, G0R 1Z0

info@novabiomatique.com

## iGS-100 Operating Modes

CO2 Operating Modes		Auxiliary Control Modes	
Output 1		Output 2	
i-xx		2-xx	
01	Day enrichment	0	ON day (always OFF during night)
02	Night enrichment		
03	24Hrs enrichment		
04	Day venting		
05	Night Venting		
06	24Hrs venting	1	ON night (always OFF during day)
		2	ON 24Hrs
		3	OFF day (always ON during night)
		4	OFF night (always ON during day)
		5	OFF 24Hrs
		1	OFF during CO2
		2	OFF during CO2 + 5 minutes
		3	OFF during CO2 + 10 minutes
		4	OFF during CO2 + 15 minutes
		5	OFF during CO2 + 20 minutes
		1	ON during CO2
		2	ON during CO2 + 5 minutes
		3	ON during CO2 + 10 minutes
		4	ON during CO2 + 15 minutes
		5	ON during CO2 + 20 minutes
		1	ON during CO2
		2	ON during CO2 + 5 minutes
		3	ON during CO2 + 10 minutes
		4	ON during CO2 + 15 minutes
		5	ON during CO2 + 20 minutes

Note:

1- Compose the operating mode i-xx with the number in the first column.

2- Compose the operating mode 2-xx with the number in the table.

3- Eg. : Output 2 ON at night and OFF during CO2 + 10 min. will be code 2-13